

Two-wire Fire Systems



CFP AlarmSense

CFP ALARMSENSE 2-8 ZONE TWO-WIRE FIRE PANELS TO EN54-2/4

Order Code	Description
CFP702-2	CFP AlarmSense 2 zone two-wire panel. Max 2 x 3.2Ah batteries
CFP704-2	CFP AlarmSense 4 zone two-wire panel. Max 2 x 3.2Ah batteries
CFP708-2	CFP AlarmSense 8 zone two-wire panel. Max 2 x 3.2Ah batteries
BF319	Fire alarm control panel Mains keyswitch
CFP760	CFP 8 zone repeater. Max 8 per system. Max. 2 x 3.2Ah batteries
S-KEY	Spare key for use with CFP Main and Repeater panels
CFP761	CFP/XFP network driver card (1 per repeater system, fit at main)
CFP762	CFP Relay output card (reset, fault, aux & remote relay outputs)
CFP763	CFP Relay output card (As per CFP762 + 8 output per zone relays)
CFP764	CFP Relay output card (8 output per zone relays for CFP708-2)
CFP765	CFP Relay output card (4 output per zone relays for CFP704-2)
CFP766	CFP Relay output card (2 output per zone relays for CFP702-2)



CFP702-2 / CFP704-2 / CFP708-2

ALARMSENSE MANUAL CALL POINTS (APOLLO)

Order Code	Description
55400-894APO	AlarmSense surface mounting manual call point
26729-152APO	Hinged transparent call point cover

For Manual Call Point Stoppers, see page 13



55400-894APO

ALARMSENSE DETECTORS (APOLLO)

Order Code	Description
55000-190APO	AlarmSense standard heat detector
55000-193APO	AlarmSense high temperature heat detector
55000-390APO	AlarmSense optical smoke detector
55000-391APO	AlarmSense integrating optical smoke detector
45681-244APO	AlarmSense base with 'removAlert'



55000-190APO




55000-390APO

ALARMSENSE SOUNDERS & BEACONS (APOLLO)

Order Code	Description
45681-510APO	AlarmSense base sounder (requires cap for stand-alone use)
45681-294	White cap for base sounder
45681-509APO	AlarmSense base sounder/visual indicator
55000-018APO	AlarmSense open area sounder, IP65
55000-017APO	AlarmSense open area sounder/visual indicator, IP65



45681-510APO

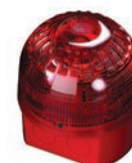

55000-017APO