




1. Strip cable as above -
Note: Trim cable tails to double over for better terminal contact.

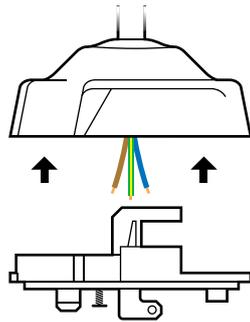

2. Remove plug cover.
3. Pass cable through plug cover centre hole.

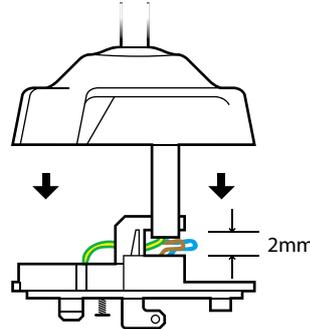


4. Terminate conductors into terminals.
5. Push outer sheath of cable firmly into jaws of sheath grip, making sure that at least 2mm of sheath protrudes below the grip.

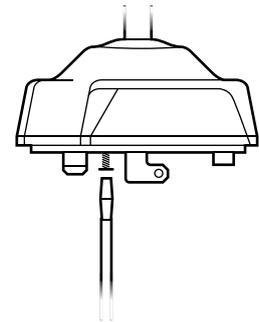


6. Refit cover.


PCR2000

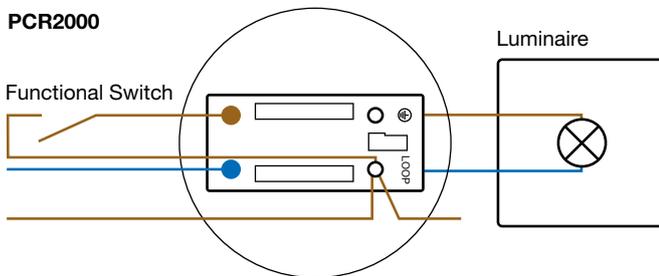

CR64AX

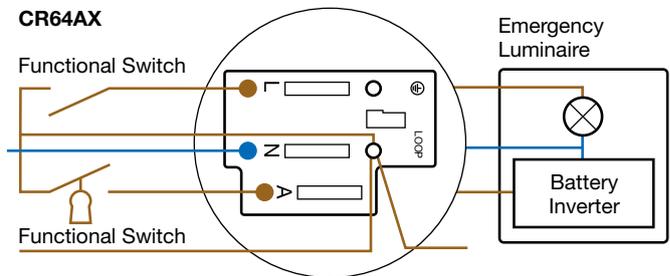

CR64AX

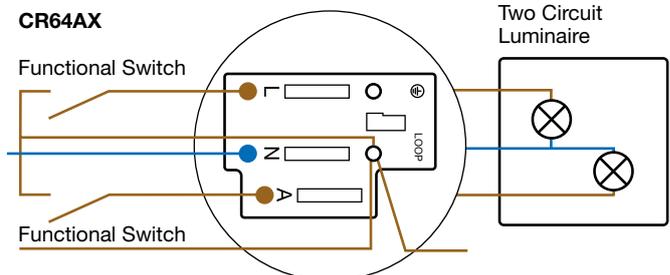

Note: earth connections omitted for clarity